



**Flanders  
Scientific  
Inc.**

**FSI Update Cable**

20121128

---

Flanders Scientific, Inc.  
6215 Shiloh Crossing  
Suite G  
Alpharetta, GA 30005  
Phone: +1.678.835.4934  
Fax: +1.678.804.1882  
E-Mail: [Support@FlandersScientific.com](mailto:Support@FlandersScientific.com)  
[www.FlandersScientific.com](http://www.FlandersScientific.com)


Take a USB cable with a Male Connector.

The other side of the cable will need to be connected to an RJ45 connector.



Typical color coding for USB-A.

- 1 = +5V (Red)
- 2 = Data - (White)
- 3 = Data + (Green)
- 4 = Gnd (Black)

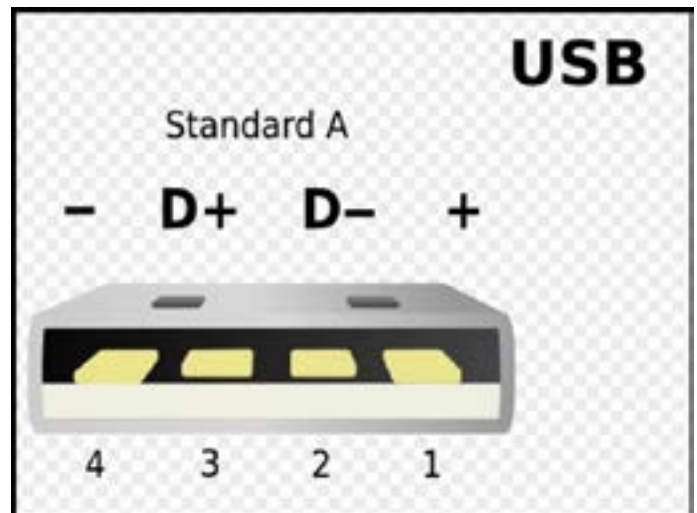

On the RJ45 connector:

- Black wire (Gnd) to position 5.
- Green wire (Data +) to position 1.
- White wire (Data -) to position 2.
- Red wire (+5V) should NOT be connected.

